

Part Numbers 436-1, -2, -3 & -4

## **EASY CHOPPER or EASY FRYKUTTER**

### Blade Replacement Instructions

To replace the blades in your Easy Chopper or Easy Frykutter, the Blade and Holder Assembly must be removed from the machine.

 
#### **Disassemble the blade and holder assembly**

- Place Blade and Holder Assembly on a tabletop.
- Remove the (2) screws.
- Gently tap the Blades and Blade Spacers from the Blade Holder.


#### **Installing new blades**

- Place the Blade Holder on a tabletop with the Blade Spacer Pockets upwards.
- Insert the (4) Blade Spacers with their slots toward the inner opening of the Blade Holder.


- Insert Blades with sharp edge downward and slots upward into the Blade Spacer Slots. (These will run parallel to each other)



- Insert Blades with sharp edge downward and slots downward into the Blade Spacer Slots and the previously assembled Blades.

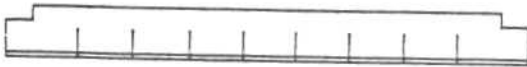

- Re-position Blade Holder Plate and secure with screws (2).

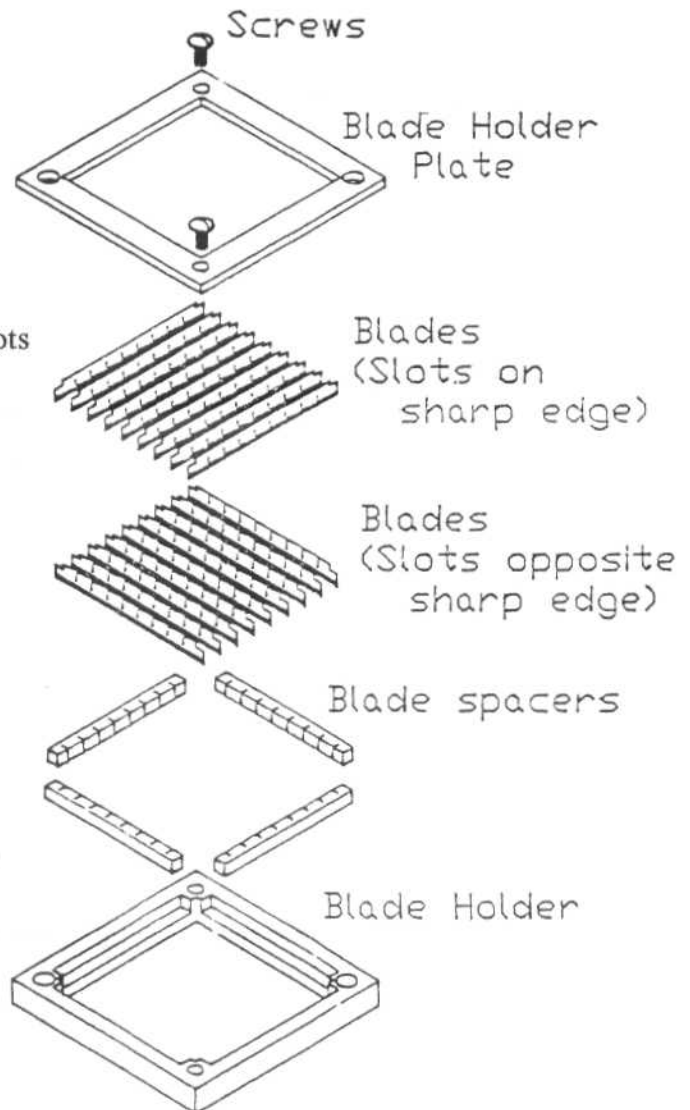

NEMCO FOOD EQUIPMENT  
301 Meuse Argonne  
Hicksville, Ohio 43526  
Phone: (419) 542-7751