

roundup

FOOD EQUIPMENT DIVISION

A. J. ANTUNES & CO. 180 Kehoe Blvd., Carol Stream, Illinois 60188

APPLICATION AND INSTALLATION INSTRUCTIONS

MOTOR KITS 7000263, 268, 269, &270

Application:

#7000263 (230v/3 RPM) replaces motor(s) #4000153, 162, 177 & 180 installed in any Sausage Corral (SC-20, 25 & 40), Hot Dog Corral (HDC-5, 20, 21, 30, 35 & 50), and Vertical Contact Toaster (VCT-22, 25 & 30).

#7000268 (120v/1 RPM) replaces motor(s) #4000150 & 174 installed in Vertical Contact Toasters (VCT-10 & 50), Pizza Station (PS-314), Pizza Display (PZD-414), Pretzel Display (PRD-300) & Corn Carousel (CC-19).

#7000269 (230v/1 RPM) replaces motor(s) #4000151 & 175 installed in Vertical Contact Toasters (VCT-10, & 50), Pizza Station (PS-314), Pizza Display (PZD-414), Pretzel Display (PRD-300) & the Corn Carousel (CC-19).

#7000270 (120v/3 RPM) replaces motor(s) #4000152, 176 & 179 installed in Hot Dog Corral (HDC-5, 20, 21, 30, 35 & 50) or Vertical Contact Toaster (VCT-25 & 30).

Installation Instructions:

Note: Unless your electrical service is 50 HZ, ignore/remove the red wire marked "50 HZ".

A. Sausage Corral (SC-20, 25 & 40):

Install the motor assembly as received (with the "Manila Card Stock" insulator and 2-3/4" X 3" motor adapter plate installed) and position the insulator against the unit's insulation.

B. Hot Dog Corral (HDC-5, 20, 21, 30, 35 & 50):

If the motor you are replacing (or the unit's weldment) has the same "bolt pattern" (1-8/32" X 1-18/32") as the adapter plate already mounted on this replacement motor, install it just as it is with the tab side of the "Manila Card Stock" insulator against the unit's insulation.

If the motor you are replacing (or the unit's "weldment") has the larger, "four corners" (2-1/2" X 2-3/8") "bolt pattern", remove the stainless steel adapter plate already installed on the new motor and install motor with the "Manila Card Stock insulator" (and the tab side against the insulation).

C. Vertical Contact Toaster (VCT-10, 22, 25, 30 & 50):

Remove the motor mounting adapter plate and "Manila Card Stock" insulator on the new motor (if it is so equipped) and then install the flat (3-1/2" X 4") adapter plate also furnished in the kit. Install the motor on the mounting/slide plate so the motor's electrical terminals are up, the motor drive shaft centers through the large hole, and the gear box "dimple" fits the smaller hole in the mounting/slide plate. Install the drive sprocket with a space of 1/4" (the width of a # 2 pencil) between the inside face of the drive sprocket and the motor mounting plate.

D. Pizza Station (PS-314), Pizza Display (PZD-414), Pretzel Display (PRD-300) and Corn Carousel (CC-19):

The new motor's "bolt pattern" (2-1/2" X 2-3/8") and mounting is the same as the one you are replacing.