

## BUNN-O-MATIC CORPORATION REPLACEMENT WARMER


This kit contains:

- A) One tubular heating element
- B) One heat retainer plate
- C) One strap assembly
- D) One nut

To replace the existing warmer element

- 1) Remove the entire warmer assembly from the machine.
- 2) Remove all of the old heater element and discard, leaving just the dish and the two nuts.
- 3) Place the strap assembly (C) over the two studs with the shorter end toward the grounding bushing. Secure the strap with the two nuts FINGER TIGHT ONLY. DO NOT USE WRENCH OR NUT DRIVER. If the nuts are drawn down too tightly, the porcelain surface will chip.
- 4) Place the tubular heating element (A) on the dish. (flattened side of element toward dish).
- 5) Place the heat retaining plate (B) over and around the heating element. Locate and secure the plate using the nut (D) on the center stud. Tighten securely.

**WARNING**  
SEE REVERSE SIDE  
FOR PROPER WARMER  
ORIENTATION

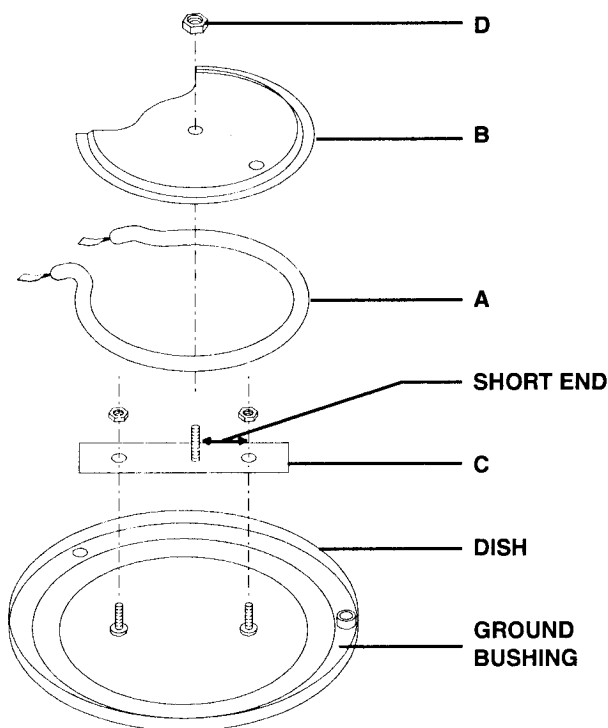

DISH AND HEATER ELEMENT MAY NOT BE EXACTLY AS SHOWN

**IMPORTANT**  
**ORIENT LEGS OF REPLACEMENT WARMER AS SHOWN**  
**(TOP VIEW)**

