

REPLACEMENT INSTRUCTIONS

PRINCE CASTLE INC. 
WORLDWIDE

Slicers with Bridge Part No. 919-208

(For No. 919-80 See Reverse Side)

FASLINE

REPLACING BLADES







CAUTION: Blades are very sharp.

Tools Required • Flatblade screwdriver

1. Pull pusher head handle as far back as possible. Remove and discard old blades and hardware.

Install this side first. Make sure blade block is flush against bridge.

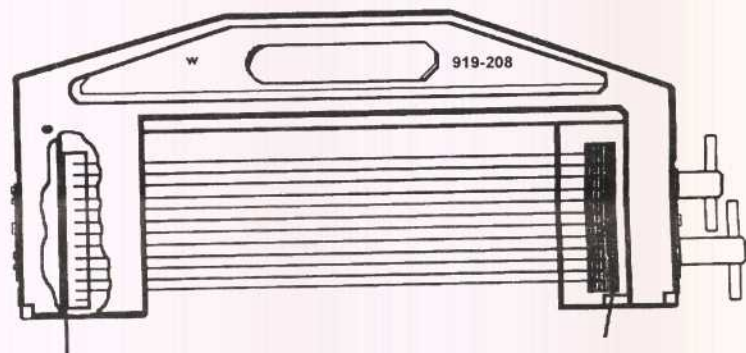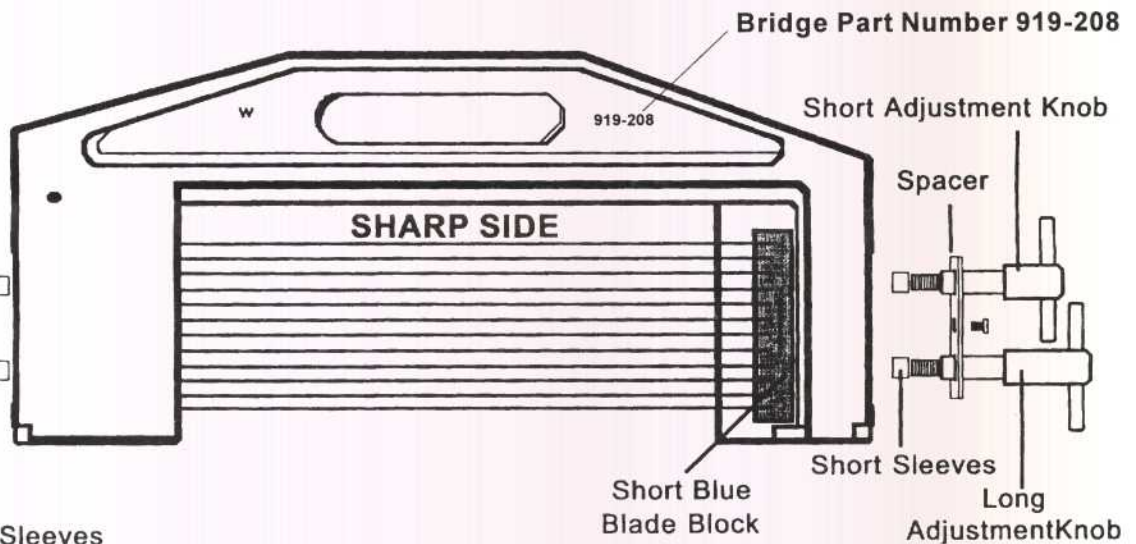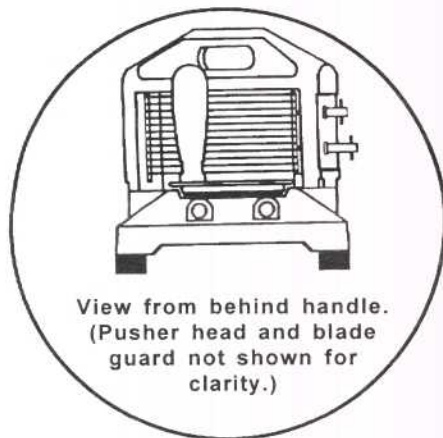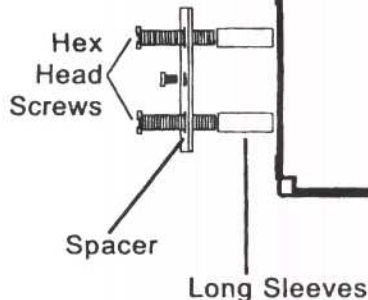

When mounted correctly, blade block should be flush on this side.

When mounted correctly, there will be a 1/4" gap between blade block and bridge on this side.

2. Carefully install new blades on unit.

IMPORTANT: Drawings show view from behind handle.

IMPORTANT: Check blades for tightness prior to use. Loose blades will bow as tomato passes through causing damage to the blades and the pusher head. To ensure blades are tightened properly, alternately tighten adjustment knobs.

CLEANING BLADES

Always clean blades after each use. Food acids will dull and corrode blades. Clean between blades using a pot cleaning brush, and spray with hot water. Make sure to remove any excess tomato skin. Let unit air dry.

PRINCE CASTLE INC. 
WORLDWIDE

355 East Kehoe Blvd. • Carol Stream, IL 60188
Tel: (630) 462-8800 • Fax: (630) 462-1460
Toll Free: 1-800-PCASTLE

REPLACEMENT INSTRUCTIONS

PRINCE CASTLE INC. 
WORLDWIDE

Slicers with Bridge Part No. 919-80

(For No. 919-208 See Reverse Side)

FASLINE



REPLACING BLADES

CAUTION: Blades are very sharp.

Tools Required • Flatblade screwdriver

1. Pull pusher head handle as far back as possible. Remove and discard old blades and hardware.

Install this side first. Make sure blade block is flush against bridge.

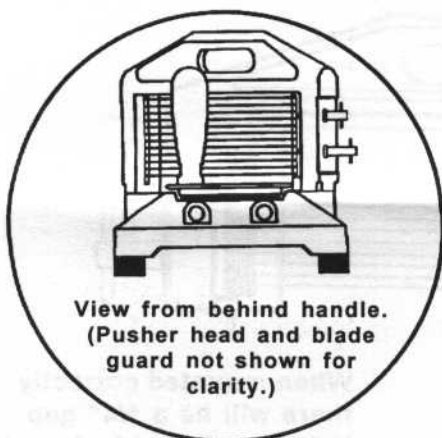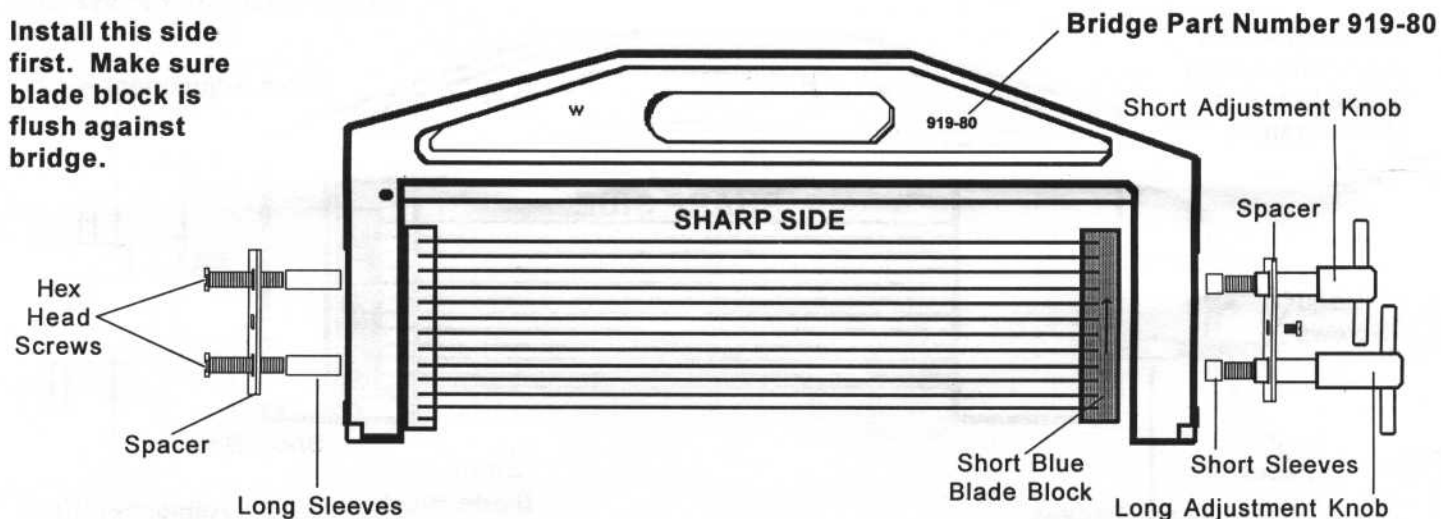

When mounted correctly, blade block should be flush on this side.

When mounted correctly, there will be a 1/4" gap between blade block and bridge on this side.

2. Carefully install new blades on unit.

IMPORTANT: Drawings show view from behind handle.

IMPORTANT: Check blades for tightness prior to use. Loose blades will bow as tomato passes through causing damage to the blades and the pusher head. To ensure blades are tightened properly, alternately tighten adjustment knobs.

CLEANING BLADES

Always clean blades after each use. Food acids will dull and corrode blades. Clean between blades using a pot cleaning brush, and spray with hot water. Make sure to remove any excess tomato skin. Let unit air dry.

PRINCE CASTLE INC. 
WORLDWIDE

355 East Kehoe Blvd. • Carol Stream, IL 60188
Tel: (630) 462-8800 • Fax: (630) 462-1460
Toll Free: 1-800-PCASTLE