


Pusher Head Instruction Sheet For 919 & 927 Series Tomato Slicers

1. Turn the pusher head over so that the nuts face you.
2. Remove the nuts from the bottom of the pusher head assembly and discard. Using both hands, hold the pusher head together, turn it over and insert the pusher head assembly into the carrier plate.
3. Alternately, tighten the (2) screws down a little at a time until the pusher head feels snug in the carrier plate.
4. Now, tighten the screw that is the farthest away from the handle all the way down. Then tighten the other screw on the pusher head all the way down.
5. Gently slide the pusher head through the blades without a tomato to ensure proper alignment. Some adjustments may be required for proper alignment due to wear of slicer parts from normal use. If the blades are hitting the pusher head plates loosen the screws on the pusher head and shift the pusher head left, right, up or down depending on where the blades are hitting the pusher head. Tighten the pusher head down again.
6. If your pusher head plates are still hitting the blades, a flat blade screwdriver can be used to adjust the spacing between the pusher head plates. Insert the screwdriver into the pusher plate that is hitting the blade, gently prying the pusher head slightly up or down depending on where the blades are hitting the pusher head. Do this until none of the blades are touching the pusher head plates.

If the blades are still hitting the pusher head assembly contact Prince Castle Service Department at 1-800-P-CASTLE

NOTE: When the slicer is not in use, make sure the pusher head is pushed through the blades. Check the blade tension and alignment of the pusher prior to using the slicer.

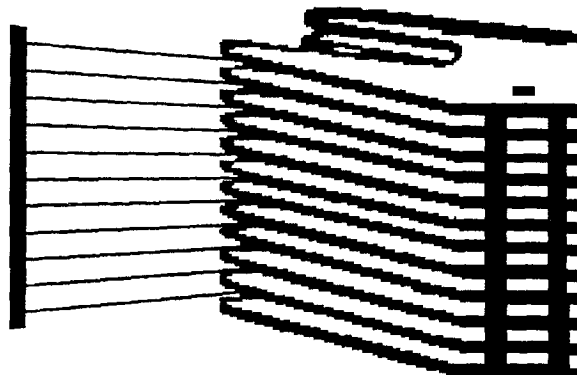

PRINCE CASTLE INC. 
WORLDWIDE

355 EAST KEHOE BLVD. • CAROL STREAM, ILLINOIS 60188 • U.S.A.
PHONE: (630) 462-8800 • FAX: (630) 462-1460
TOLL FREE: • 1-800-P-CASTLE (722-7853)